

5. Description of the 6-B channel in DMX512

NO.	function	function declaration
Channel 1	total dimming	Total dimming, linear dimming, from dark to bright
Channel 2	WarmWhite e dimming	WarmWhite color selection (000-255) B, C key modification color selection
Channel 3	White dimming	White color selection (000-255) B, C key modification color selection
Channel 4	strobe	0-5: None, 6-255: From slow to fast
Channel 5	function	000-005 is empty, 006-050 is a transition 101-150 gradient, 151-200 pulse variation 201-255 Voice Control
Channel 6	Function speed	0-255 from slow to fast

LED imaging lamp



operating instruction

Read carefully before use

1. Illustration section:



A. Function key B. Plus key C. Minus key D. Confirm key



A B C D

Instructions: Pressing function key A will display various effects in sequence, with the first two digits shown on the digital display.

Represents the current function (refer to the function table). The last two digits indicate the address of the function.

Code or speed parameters. Press B or C to modify the values. Press D to confirm.

2. LED display window function comparison table (Select all functions and press

D to confirm)

NO.	Show	function declaration
1	A001	address code (001-512), B/C keys for increment/decrement of address code value
2	2ch/6ha/6hb	Channel selection (2-channel, 6-channel A, 6-channel B) Addition and subtraction of B and C bonds
3	FF95	Jump (00-99) B, C key modification speed
4	EE95	Gradient (00-99) B, C key modification speed
5	PP95	Pulse variation (00-99) B, C bond modification rate

6	SoUd	Voice control (00-99) Voice control effect
7	R255	Warm White color selection (000-255) B, C key modification color selection
8	G255	White color selection (000-255) B, C key modification color selection

3.DMX512 channel description (2 channels)

NO.	function	function declaration
Channel 1	WarmWhite dimming	WarmWhite color selection (000-255) B, C key modification color selection
Channel 2	White dimming	White color selection (000-255) B, C key modification color selection

4. Description of the DMX512 channel (Channel 6-A)

NO.	function	function declaration
Channel 1	total dimming	Total dimming, linear dimming, from dark to bright
Channel 2	stroboflash	0-5: None, 6-255: From slow to fast
Channel 3	function	000-005 is empty, 006-050 is a transition 101-150 gradient, 151-200 pulse variation 201-255 Voice Control
Channel 4	Function speed	0-255 from slow to fast
Channel 5	WarmWhite dimming	WarmWhite color selection (000-255) B, C key modification color selection
Channel 6	White dimming	White color selection (000-255) B, C key modification color selection